

Before You Begin – Important Points

- Powder-X Coating Systems manufactured equipment is highly engineered to operate at the safest and most efficient levels possible. The environment the equipment is installed in and standard equipment maintenance are paramount to the operation of this equipment. Keep this in mind when choosing your location.
- Codes vary from municipality to municipality. Although this equipment was manufactured to standard interpretation of the latest editions of NFPA 33, NFPA 86, and the National Fire Code, local code interpretation may differ. Code interpretation by Local Authorities always takes precedence and should be followed precisely. Code research should begin prior to installation of the equipment as there may be code that dictates placement, such as distance from walls, etc.
- The equipment provided uses only U.S.-made components. All burners, fans, and lights are U.L. listed. Control Panels are UL listed and stamped. Ovens and booths are not, as a whole unit, listed. This service is not available by Powder-X.
- This manual provides a set of base instructions. Throughout the instructions, you will be referred to the drawing section, which will contain both basic drawings and drawings pertaining to your equipment. Use these drawings throughout the entire installation.
- Many parts look very similar. Be sure to pay very close attention to the instructions, as placing an incorrect part will result in disassembly and may damage your equipment.
- Only qualified personnel that are equipped with the proper tools should perform the installation. All wiring requires a licensed electrician to validate the warranty. A licensed contractor must do all utility hook-ups to validate the warranty.
- Powder-X Coating Systems does not employ a factory installation crew. Authorized installation supervision on-site is offered at a cost.
- Powder-X Coating Systems equipment requires authorized parts. Replacing any component of your equipment with components not obtained thru Powder-X Coating Systems or components authorized before their replacement can void your warranty. For all component needs, contact our offices at 888-326-4840.
- Proper maintenance of your equipment will extend the equipment's life expectancy as well as help your equipment run more efficiently. Failure to properly maintain your equipment can also result in your warranty being voided. Refer to the Maintenance section of this manual and set procedures accordingly.
- Your equipment will arrive broken down and crated and/or skidded. Removal from the truck will require a forklift that is a minimum of 4,000 lbs. Fork extensions may be helpful.